U. S. /Canada Consumer Service Contact:
Please visit our U.S. Consumer Support Web site at: http://www.leapfrog.com/support, or our Canada Consumer Support Web site at: http://lfcanada.custhelp.com, 24 hours a day. You can search for frequently asked questions, review your previous questions, or submit a question to our support staff via e-mail.

U.S./Canada Office:
Telephone: (800) 701-LEAP (5327)
Hours: Monday through Saturday, 5:00 AM to 7:00 PM, Pacific time.

U.K. Consumer Service Contact:
Please visit our U.K. Consumer Support Web site at: http://leapfroguk.custhelp.com, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

U.K. Office:
Telephone: 0800 169 5435
Eire: 00 44 1702 200244
Hours: Monday through Friday, 9:00 AM to 5:00 PM

Australia Consumer Service Contact:
Please submit questions to our support staff via e-mail at: info@funtastic.com.au

Australian Office:
Telephone: 1800 244 543
Opening Hours: Monday to Friday 8:30 AM to 5:00 PM

IMPORTANT: Please notify the LeapFrog Consumer Service department of any difficulties before returning this product for any reason. Returns must have a Return Authorization number (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.

Warranty Information
This LeapFrog® product is warranted only to the original purchaser for a period of three months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials of the product. All warranty claims are subject to: (1) LeapFrog being notified of the warranty claim within the warranty period, (2) LeapFrog verifying the existence of a defect in the product and (3) receipt of valid proof of your purchase date.

Before returning a product for any reason, please notify the LeapFrog Consumer Service Department. If the service representative is unable to solve the problem, you will be provided with instructions as to how to go about having the unit repaired or replaced if it is under warranty. Return of a product under warranty is governed by the following rules -- If LeapFrog believes that there may be a defect in materials or workmanship and LeapFrog confirms your purchase date, LeapFrog will provide you with prepaid shipping instructions for returning the product. Otherwise, you must return your product, shipping prepaid and with proof of purchase date, as instructed by a LeapFrog service representative.

In the event that a product under warranty is repaired or replaced, the replacement will be covered under the original warranty or for 30 days, whichever is longer. Repair or replacement is your exclusive remedy, and LeapFrog's exclusive liability, under this warranty. Replacement may consist of replacing the product with the same product or with a different product of the same value. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state and country to country.

Canada: In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

U.K.: In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the 3-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. You may also have other rights under U.K. law, which this warranty does not limit.

LEAPFROG, the LeapFrog logo, LEAPSTER and LEAPSTER L-MAX are registered trademarks or trademarks of LeapFrog Enterprises, Inc. Copyright © 2005 LeapFrog Enterprises, Inc. All rights reserved.

Visit our fun-filled Web site at: www.leapsterworld.com Part number: 605-10691-A

Images in this Parent Guide represent gameplay only, and do not reflect actual screenshot pixelation.

LEAPSTER™
LEARNING GAME SYSTEM

COSMIC MATH

Arcade-Style Learning!

Blast off into space to save the universe from fast-moving cosmic rocks. This LEAPSTER arcade game offers endless fun and fast-paced practice to help your child gain mastery of basic math facts.

Getting Started: Insert the cartridge with the printed side facing front. Press the On/Off button to begin.

Sign In

1. Follow the on-screen instructions to sign in.
2. The LEAPSTER handheld will store the game information of up to 3 players. To remove a player, touch the X button on the screen.

Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.

Many Ways to Play

One of the most effective ways to develop computational proficiency is through engaging practice. Your child can play Cosmic Math alone or with a friend. Two players compete by selecting their levels of play and then competing for the highest score.

To turn off the background music, touch the blue musical note icon on the screen. Select "Music On" or "Music Off." This setting will return to "Music On" each time the LEAPSTER handheld is powered on.

Fun Surprises, Tips and Tricks at www.leapsterworld.com!

The Web site www.leapsterworld.com is the place to go to collect game tips and tricks and to unlock special surprises using secret codes earned while playing Cosmic Math.

Learning at All Levels

Cosmic Math features four levels of play that help children gain mastery of basic math facts. Level 1 covers simple addition and subtraction facts for first grade (ages 6-7). Level 2 (ages 7-8) addresses more challenging addition and subtraction facts for second grade. Level 3 covers multiplication tables found in third grade (ages 8-9). Level 4 presents division tables taught in fourth grade (ages 9-10). Within each level, there is also an increase in challenge related to the skill being taught.

Level 1: includes sums and differences up to 20.
Level 2: includes 1- and 2-digit addition and subtraction problems with and without regrouping.
Level 3: includes multiplication tables through 12x12.
Level 4: includes division tables through 144.

How a Tutorial Works

Tutorial support offers a strategy to help children break down a skill into smaller parts. A tutorial is activated when the player presses the Hint button. The narrator clearly explains key concepts and offers the players a correct response to ensure a successful learning experience.

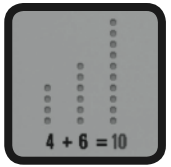

How to Play Cosmic Math

Warning! Warning! Space rocks from every angle are gaining speed on your spaceship! Your mission is to blast away the cosmic rocks before they reach your ship. Choose your spaceship, then ready, aim and fire! Using the arrow keys, players can rotate their spaceship 360 degrees to aim at targets. Then press the A button to blast away! Players can clear fast-moving space rocks by solving math problems. To hear a math problem again, players press the B button. The speed of game play increases as players demonstrate their math proficiency. But, be careful! Blasting incorrect answers will cause an explosive shower of fast-moving space rocks to head right for your spaceship!
Players only have three spaceships to win as many points as possible in each round of play. Blast away those cosmic rocks! Mission accomplished!

What's Being Taught:

Basic Math Facts: A variety of basic number combinations for addition, subtraction, mutiplication and division. Cosmic Math presents simple to more complex math facts and tables that players can learn to solve with speed and confidence.

Mental Computation: The ability to use a variety of strategies and methods to solve problems without having to work out problems on paper. Players are challenged **to** quickly solve a variety of math problems in their heads.

Why Is This Important?

Automatic recall of basic math facts is an essential building block to develop mental math and estimation skills. As children gain accuracy and fluency in their ability to recall basic math facts, they are better able to spend more time on problem solving. They don't need to stop and figure out the basics. Through repeated play, children encounter and solve a wide range of numerical equations. They can focus on using computational strategies to improve their recall of basic facts, such as make-ten, zero, count-on, count-back and turn-around facts. For example, using the strategy of turn-around facts, if children know 3+5 = 8, then they also know 5+3=8. Ongoing practice to master basic math facts is critical, but it doesn't need to be dull or tedious. Playing games such as Cosmic Math makes practice engaging and fun!

Don't miss these other fun Leapster arcade-style games!

Letterpillar Number Raiders Word Chasers

Sold separately. All titles may not be available in all markets.